

EXHIBIT G-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R-13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST DEPUTY JOHN M. GOMEZ #220 AGENCY LA PAZ COUNTY SHERIFF'S OFFICE

DATE 07 / 08 / 2013

TIME 10:45 Hrs

INTOXILYZER SERIAL # 80 - 001198

LOCATION LPCSO EHRENBERG STATION

(✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0.100 AC.

OR

Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34 C 0.2 C

(✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"

(✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.


(✓) 4. Air blank completed.

(✓) 5. Calibration check completed. Test results 0. 0.016 AC.

(✓) 6. Air blank completed.

(✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE \_\_\_\_\_

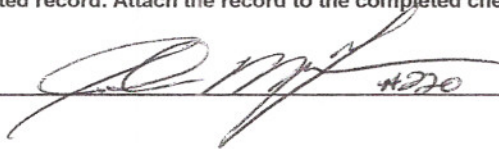

INTOXILYZER 8000

Location: EHRENBURG STATION

Serial Number: 80-001198

Core Version: 8105.48

07/08/2013

10:45:28

-----  
Standard Lot#: 15712100A1

Last Changed By: R. EPPS #90  
-----

QAS: J. GOMEZ #220

LA PAZ CSO  
-----

Operator: J. GOMEZ #220

LA PAZ CSO  
-----

Test	g/210L	Time
Air Blank	0.000	10:49:07
0.100 Cal Check	0.096	10:49:28
Air Blank	0.000	10:49:57

Preventative Maintenance  
Performed -- Timer Reset

