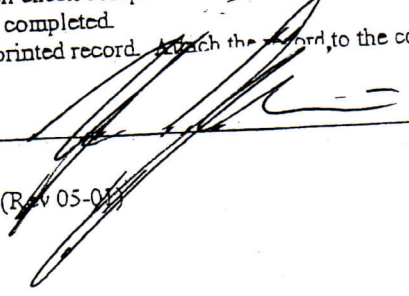


EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST Dep Johnson AGENCY LPCSO
DATE 1-14-16 TIME 836
INTOXILYZER SERIAL 80-001200 LOCATION COUNTY PARK

1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution. 100 AC.
OR
Pour a standard alcohol concentration solution 100 AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
4. Air blank completed.
5. Calibration check completed. Test results 0.100 AC.
6. Air blank completed.
7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE 

INTOXILYZER 8000

Location: QTZ 103/LFCS BACK UP

Serial Number: 80-001200

Core Version: 8105.48

01/14/2016

08:36:15

Standard Lot#: 08915100A2

Last Changed By: R. ROSADO #557

QAS: M. JOHNSON #531

LA PAZ CSO

Operator: M. JOHNSON #531

LA PAZ CSO

Test g/210L Time

Air Blank 0.000 08:37:30
0.100 Cal Check 0.100 08:37:51
Air Blank 0.000 08:38:21

Preventative Maintenance
Performed -- Timer Reset